

MAXXFAN® 1-SWITCH WALL CONTROL

MODEL SERIES 01000K INSTALLATION & OPERATION GUIDE

For use with **MAXXFAN® Plus** Models 4000K through 4801K
 For use with **MAXXFAN® Deluxe** Models 5100K through 8501K

WALL CONTROL FEATURES

- Allows fan control from convenient wall location
- Turns fan **ON** or **OFF**
- Selects **Low, Medium** or **High** Speeds
- Keypad controls at ceiling remain active



CONTROL	DESCRIPTION	
FAN ON	Turns the fan motor ON at the last selected speed	<i>When Fan is running, select LOW, MEDIUM or HIGH Speed. Once HIGH Speed is reached, the fan motor cycles back to LOW Speed.</i>
FAN OFF	Turns the Fan Motor OFF	



For additional product information please visit www.AIRXCEL.com
 AIRXCEL, INC. - RV Products Division / MAXxAIR • 3050 N. St. Francis St. • Wichita, KS 67219 • 316-832-3400 ©2015 AIRXCEL, INC.

1980A080
 08-2017


MAXXFAN® 1-SWITCH WALL CONTROL

MODEL SERIES 01000K INSTALLATION INSTRUCTIONS

For use with **MAXXFAN® Plus** Models 4000K through 4801K
For use with **MAXXFAN® Deluxe** Models 5100K through 8501K

STEP 1


Cut a 1 5/8" x 1 1/4" rectangular hole in the wall where you wish to mount the 1-Switch Wall Control.

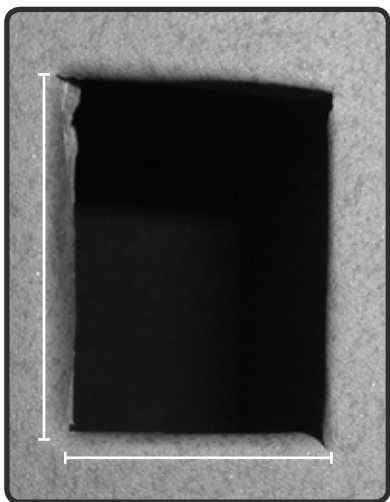

STEP 2A


Plug one end of RJ-11 cable into GRAY RJ-11 jack (👍) on MAXXFAN PCB (at ceiling). *Do not use the Black RJ-11 Jack (🚫).*

The black RJ-11 jack is for other controls

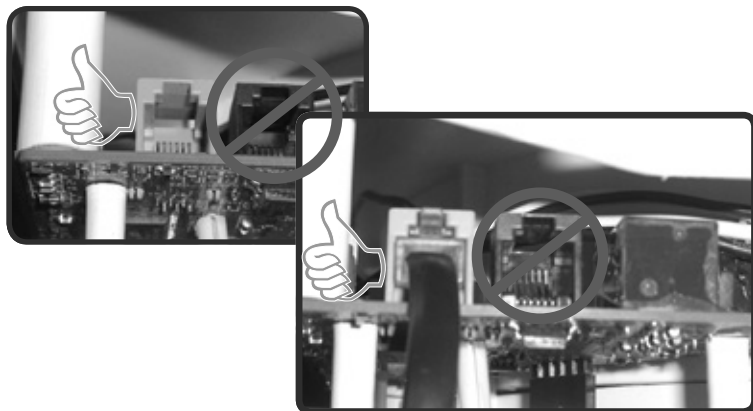

STEP 2B

Route RJ-11 cable through wall to hole cut in STEP 1.

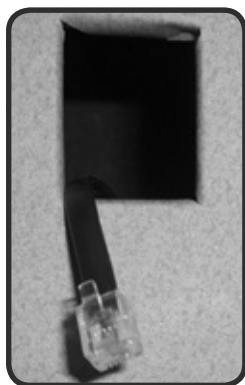

STEP 3

Plug end of RJ-11 cable into RJ-11 jack on 1-Switch Wall Control PCB. Note arrow & 'Up' marking on PCB for proper orientation.



STEP 4

Attach the Wall Control to wall with appropriate screws for wall construction.



STEP 5

Snap Bezel onto Wall Control.

